


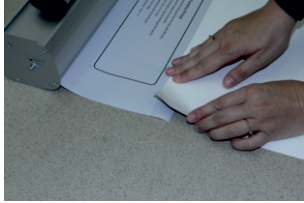

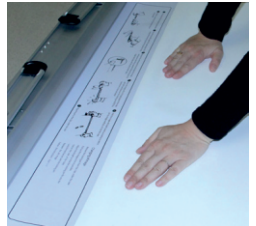







Roll-up assembly manual

<p>1</p>  <p>The roll-up consists of a steel casing, a non-telescopic mast and a hanger.</p>	<p>2</p>  <p>Open the hanger</p>	<p>3</p>  <p>Clip the top of the visual into the hanger.</p>	<p>4</p>  <p>Remove part of the double-sided tape and start gluing the bottom of the visual.</p>
<p>5</p>  <p>Continue gluing the visual until it is fully adhesive.</p>	<p>6</p>  <p>Once the visual is glued in place, press firmly to secure it in place.</p>	<p>7</p>  <p>Remove the pin to retract the display into the housing. Be careful to hold both the visual and the housing to ensure correct winding.</p>	<p>8</p>  <p>Wrap the visual display completely around the housing.</p>
<p>9</p>  <p>During assembly, install the mast in the housing.</p>	<p>10</p>  <p>Pull the display out of the housing, holding on to the mast.</p>	<p>11</p>  <p>Unroll the visual to the top and attach it to the mast.</p>	<p>12</p> 